

## Tile, Grout and Hard-Surface Cleaning System

### 1 Pre-Spray

For extra-heavy soil and grease, use **Viper Venom**.

For extra-aggressive acid-side cleaning, use **Viper Renew**.

For common soil or greasy surfaces, use **Spinergy 11**.

For hard-water scale and soap scum, use **Spinergy 2**.

**IMPORTANT:**  
Dilute according to directions. Carefully read and follow all instructions on the bottle.



▲ Hydro-Force Revolution

▼ Viper Venom    Viper Renew ▼



▲ Spinergy 11

 
▲ Spinergy 2

### 2 Pressure Rinse

Clean and rinse with the **SX-12** and **Spinergy 7** neutral rinse. **Spinergy 7** dilutes at one ounce per gallon through portables or one quart per five gallon container for truckmounts.



▲ SX-12 ▼

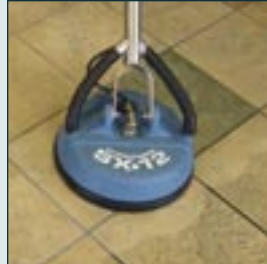

▲ Spinergy 7

### 3 Edging

Use the **Gekko** stand-up tool for edging and direct blasting of grout. Use the **SX-7** for tight spots, countertops or vertical surfaces.



▲ Gekko with Edging/Coving Tool



▲ SX-7 hand tool



▲ Gekko floor tool

### 4 Dry and Seal

Use **Hydro-Force Premium Stone & Grout Sealer** or restore stained and discolored grout with dyes added to **Clear Grout Sealer**.



▲ Injectimate Grout Sealing Kit



▲ Turbo Stick grout sealing tool



▲ Clear Grout Sealer and dyes

### Resources

#### Tile and Grout Technician Training Module

This module contains exhaustive information on maintaining tile and grout floors. The technician gets to read, listen and watch through the processes of cleaning, and sealing tile and grout.



## Hardwood Floor Cleaning System

### 1 Repair Damaged Areas

Repair damaged areas using Bridgepoint **Wood Patch**. Deep scratches and large separations need to be filled.



▲ Bridgepoint Wood Patch

#### DRYING

You may wish to speed the drying of the repairs using a heat gun, hair dryer or **Air King Blower**.

#### IMPORTANT

Watch the Bridgepoint **Wood Video** before attempting any wood cleaning.

Wood Video ▼



Local Bridgepoint Distributor

### 2 Clean Wood

#### CLEAN

Spray a light application of RTU **Wood Cleaner** over the entire floor. Scrub the floor using a **Rotary Floor Scrubber** and a **Maroon Floor Pad**. Place a **White Buffing Pad** as a cushion between the driver block and the **Maroon Pad**.

Remove the cleaning solution and suspended soil with the **Wood Finish Applicator** and a clean **Terry Cloth Cover**.

#### RINSE

Apply RTU **Wood Cleaner** to the floor and remove the remaining soil with a **Microfiber Bonnet**. Allow the floor to dry naturally (no air movement).



▲ Rotary Floor Machine



◀ Bridgepoint Wood Cleaner

### 3 Apply Wood Finish

With your customer choose Bridgepoint **Matte** or **Semi-Gloss** Finish.

#### CORNERS AND EDGES

Using a **Terry Cloth Cover** or other lint-free cloth, apply **Wood Finish** to edges and corners by hand.

#### MAIN FLOOR

Apply Bridgepoint **Wood Finish** to the rest of the floor in a moderate amount. Using **Wood Finish Applicator** and a clean **Terry Cloth Cover**, pour a small amount of finish onto the floor and spread it evenly, then move to another small section.

Allow the floor to dry naturally (usually 30 minutes.) Apply a second coat of **Wood Finish**. Allow floor to dry naturally.



▲ Applying Bridgepoint Wood Finish

Semi-Gloss ▼

Matte ▼



 
### Other Items Needed



▲ **16" Maroon Scrubbing Pad**  
Cleans the floor and creates more surface area in the existing finish to promote bonding of the Bridgepoint **Wood Finish**.




▲ **16" White Buffing Pad**  
Cushions the maroon pad, limiting abrasion in the cleaning process. Increases the shine of a floor after the floor has cured or has been cleaned without the **maroon pad**.

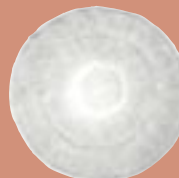

▲ **17.5" Microfiber Bonnet**

**Wood Finish Applicator** ▼  
Used with AX16 (**Terry Cloth Cover**) to clean wood floors and to apply finish.

 **Rotary Machine** ▼

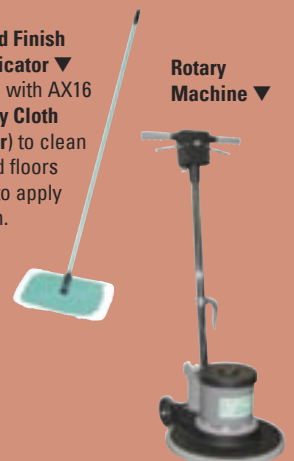

### Contact Information

 **Bridgepoint Systems** 542 W. Confluence Ave., S.L.C., UT 84123  
801-261-1282 **Toll Free Customer Service:** 1-800-794-7425

 **interlinksupply**™

Interlink Supply 1-800-660-5803 [www.interlinksupply.com](http://www.interlinksupply.com)